



RED3 INTEGRATED SERVER - SETUP GUIDE

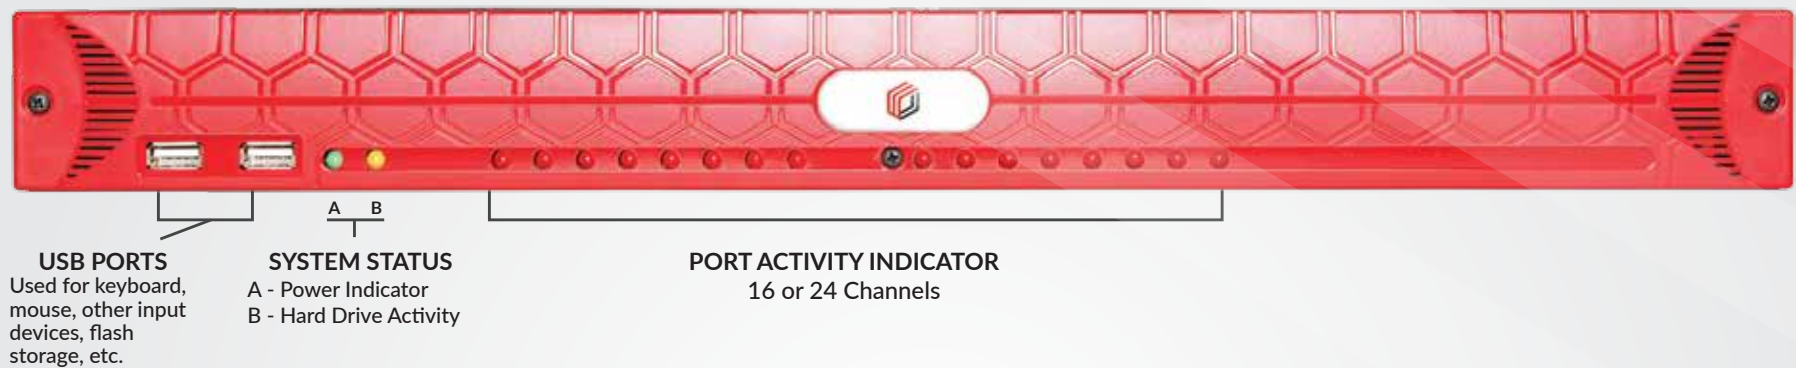

Front



Rear

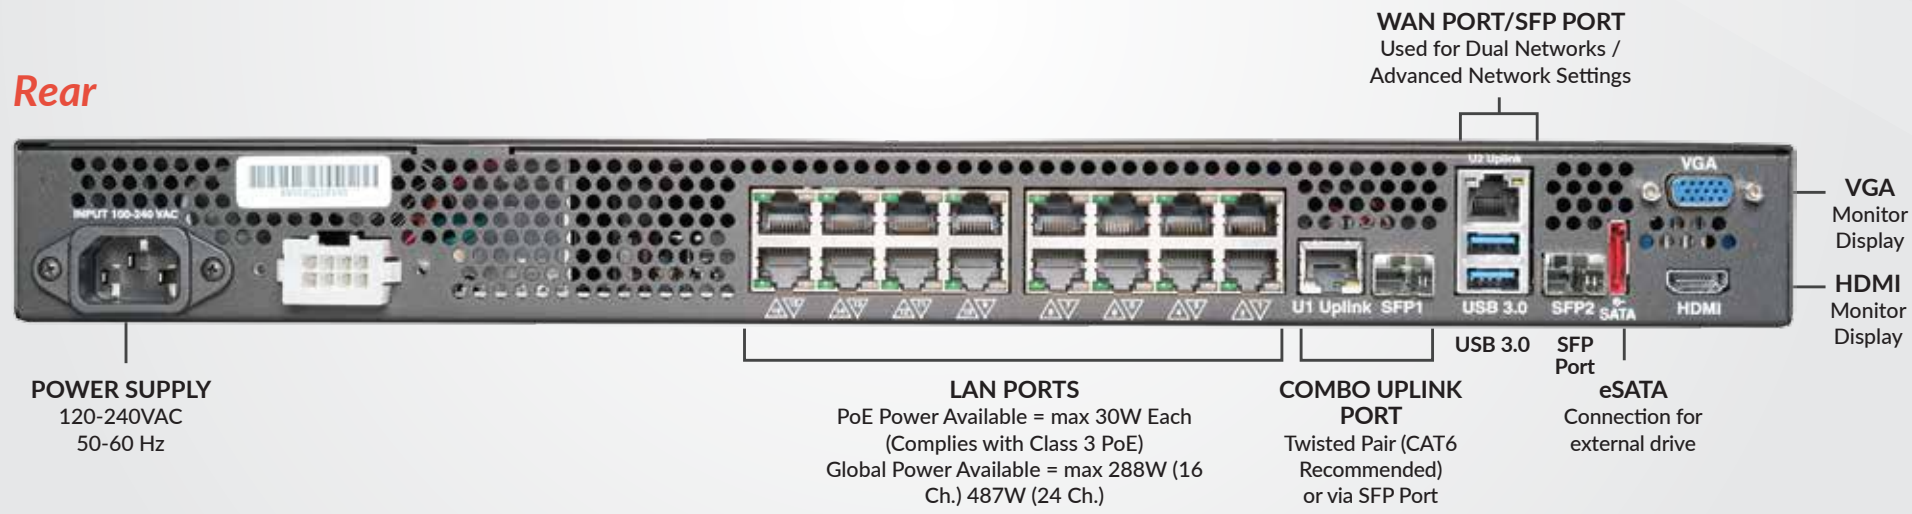

1 - Packing Contents



RED3 IS



Power Cord



Keyboard and Mouse



Software Manual



Rack Ears

2 - Prior to Connecting to a Network



1. Connect a keyboard, monitor, and mouse.
2. Connect the power supply to the RED3 IS.
3. Log in to Windows (case sensitive)
Username: Administrator
Password: Completeview!



4. Configure the Salient network, computer name, and other relative parameters for network connectivity.

3 - StartUp Wizard



After successfully logging into Windows, the CompleteView™ StartUp Wizard will automatically launch. The Wizard will step through the initial configuration of CompleteView™ server. Contact Salient support at <http://www.salientsys.com/support/contact-support/>, or 1-844-SALIENT (1-844-725-4368) for assistance, if required. The system does come fully licensed with 16 or 24 channels depending on the unit.

4 - System Management



The default IP address for the RED3 switch is 192.168.1.50, but can be set through the web interface.

To configure the RED3 integrated switch, browse to <http://192.168.1.50>.

Username: Admin
Password: Completeview!
(case sensitive)

Cameras will connect to ports 1 to 16 or 1 to 24 depending on the unit.

Connect U2 to the client/corporate network. The network address is configured through the Windows Control Panel. U1 is used as an expansion port to the switch to connect additional devices or switches.