



## Front

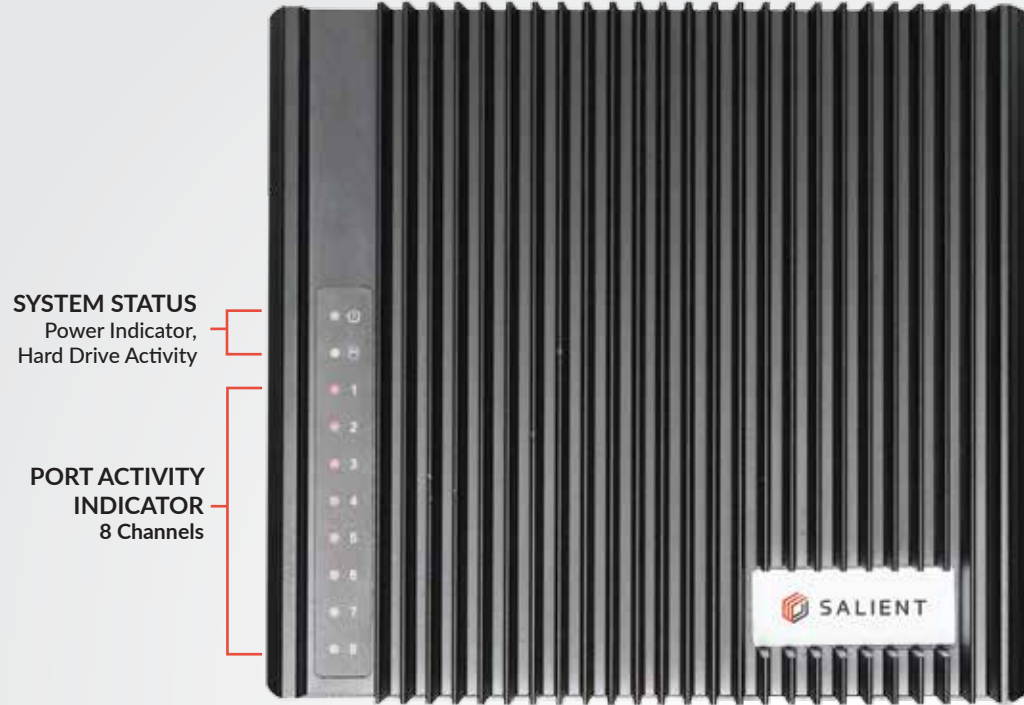

## Rear

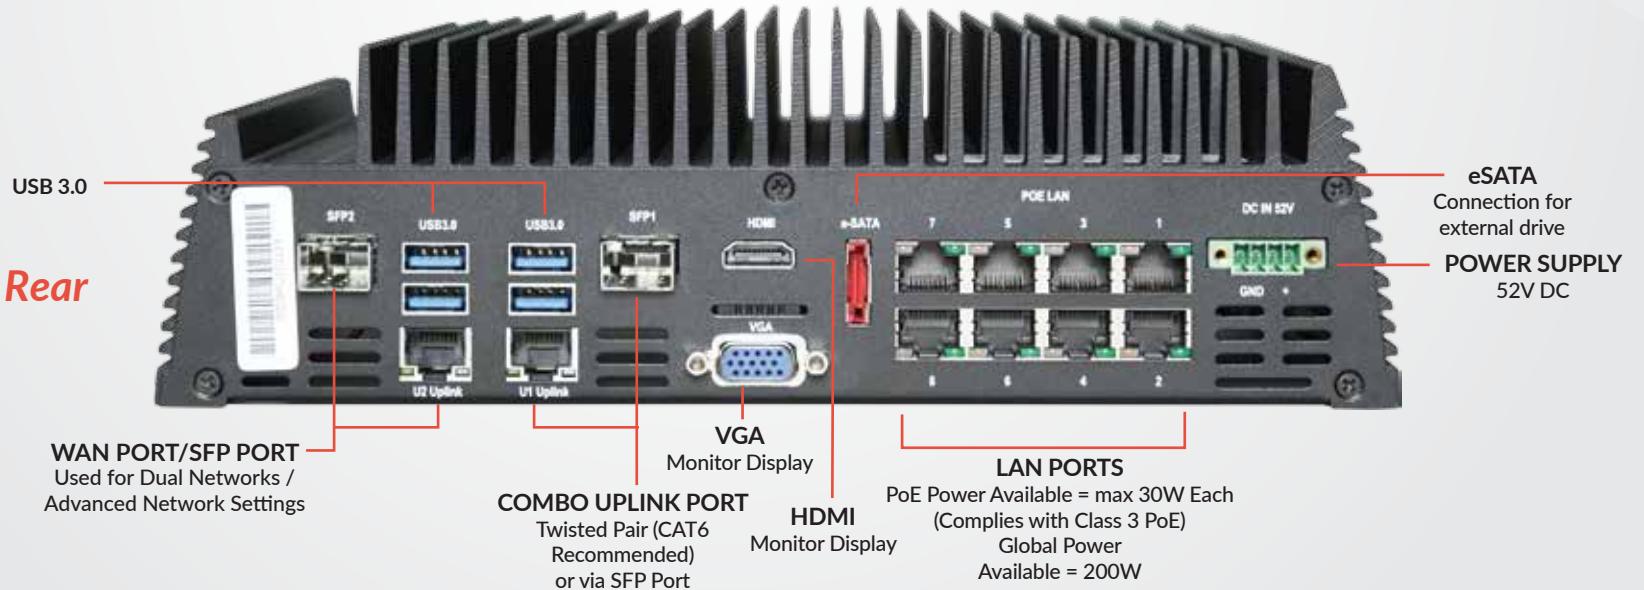

## 1 - Packing Contents



## 2 - Prior to Connecting to a Network



## 3 - StartUp Wizard



After successfully logging into Windows, the CompleteView™ StartUp Wizard will automatically launch. The Wizard will step through the initial configuration of CompleteView™ server. Contact Salient support at <http://www.salientsys.com/support/contact-support/>, or 1-844-SALIENT (1-844-725-4368) for assistance, if required. The system does come fully licensed with 8 channels.

## 4 - System Management



The default IP address for the eXtreme8 switch is 192.168.1.50, but can be set through the web interface.

To configure the eXtreme8 integrated switch, browse to <http://192.168.1.50>.

**Username:** Admin  
**Password:** Completeview!  
(case sensitive)

Cameras will connect to ports 1 to 8.

Connect U2 to the client/corporate network. The network address is configured through the Windows Control Panel. U1 is used as an expansion port to the switch to connect additional devices or switches.